

PVI00592EN_V01


Glove-Box Systems

Highest personal safety

- Glove-Box for dust-free filling and emptying of pharmacological and toxic hazardous materials
- Highest staff and product protection
- Simple to use, reliable handling and safe to use
- Ex-version according to ATEX available



big-bag emptying with glove-box

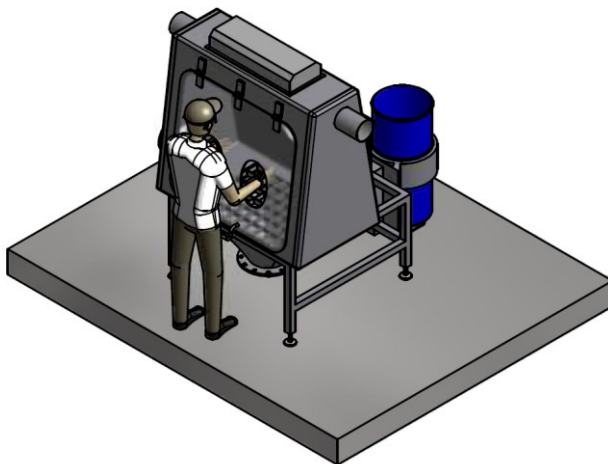

drum emptying station in glove-box



flexible glove-box




PVI00592EN_V01

Function using the example of Big-Bag emptying with glove-box

When emptying Big-Bags, dust or gas of varying concentrations escapes at the connection to the spigot, during docking and undocking. The containment system of Novindustria is closed in every working phase and thus prevents, almost completely, the contamination of the personnel and the environment. At the same time, product protection is also guaranteed.



The big-bag closure is open. The discharge hose is inserted into the cabin through the iris valve.

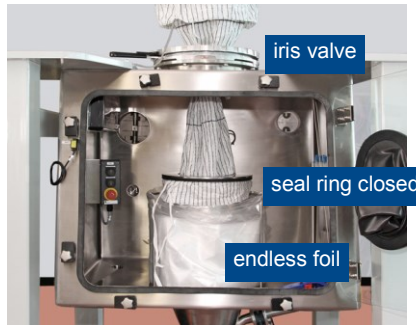

The hose is connected to the adapter. The discharge of the big-bag begins.



The big-bag is discharged, the iris valve is closed and the sealing ring is raised.



Pull endless foil up over the big-bag discharge hose, attach cable tie, use the bandrapper to tighten the cable tie and cut off the excess.



Catch foil under the enclosed big-bag hose, pull it up, attach cable tie and cut the foil under the cable tie.

